


Procedure
for
Adapting
the
Zebra Z4M



Remove the printers' base. To do this, you need to remove screws numbered 1 – 4.

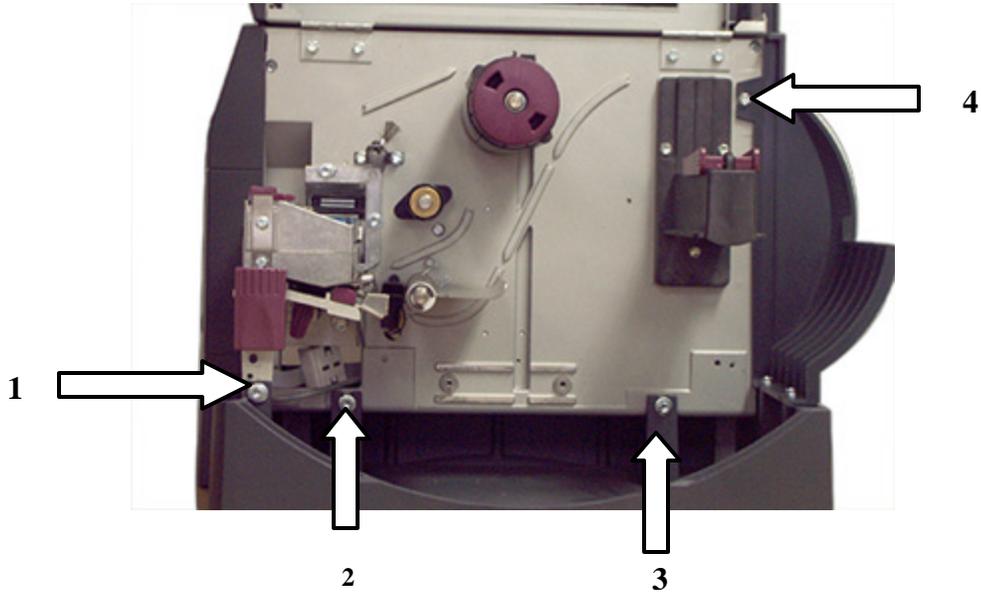


(Note: You will need to use screws 1,2, and 3 to secure the printer to the base plate!!!)

Remove the two screws that secure the electronics side cover in place.




Once the electronics side cover is removed, remove the two remaining screws that are securing the printer to its base.

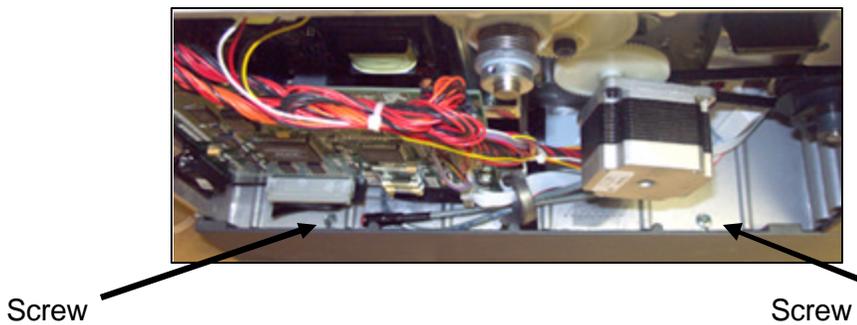




The printer should now separate from its base.

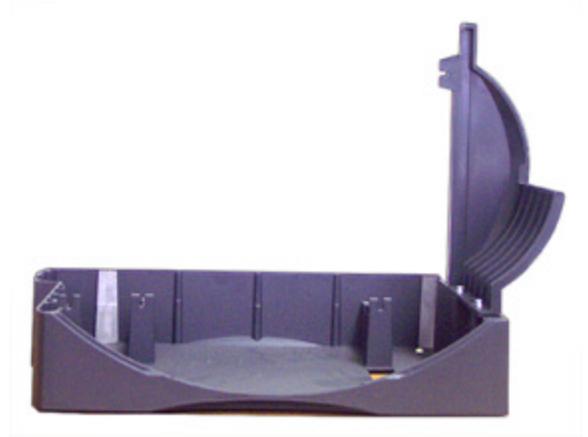

Now you need to remove the printer's front panel. There is one (1) screw securing the front panel to the printer.




Remove Screw

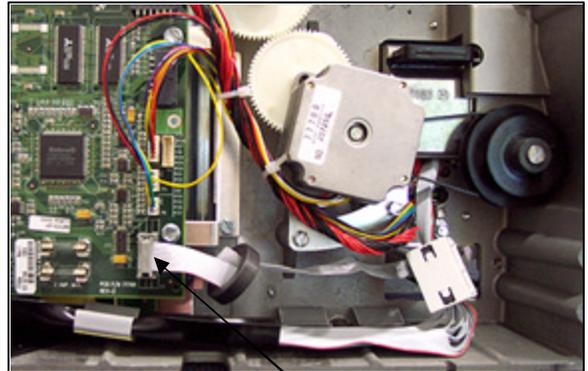

Unplug the front panel cable



Remove the front panel and replace it with the front panel from the accessory box.

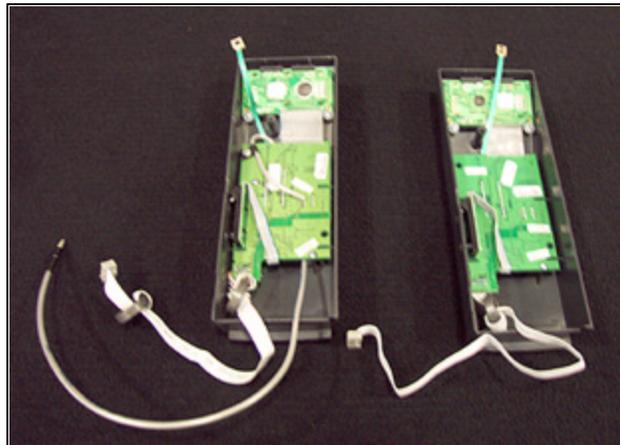


New Front Panel

Old Front Panel

(There will be an initial charge for the adapted front panel; “New” front panel. A credit will be issued upon return of “Old” front panel to Tharo Systems, Inc.)

Reconnect all cable connections and secure the new front panel with one (1) screw.

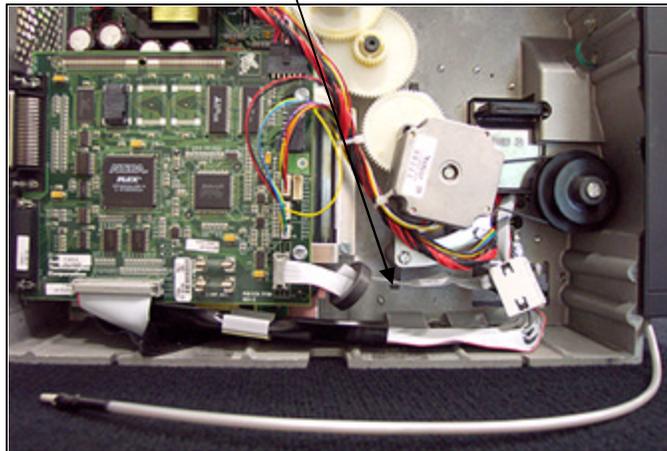

Replace the electronics side cover.