



THARO Programming Language

Command Reference

Tharo Systems, Inc.
2866 Nationwide Parkway
PO Box 798
Brunswick, Ohio 44212-0798

Phone: (330) 273-4408
Fax: (330) 225-0099
E-mail: techsupport@tharo.com
<http://www.tharo.com>

Table of Contents

Table of Contents	3
Command / Data Types	6
Command Syntax	6
Setup Commands	7
^Ax – Printing Mode	7
^Bx – Backward Length	7
^Cx – Batch Size	7
^D+dddd.hh – 4-digit Date Offset	8
^D+V00.V01 – Variable Date Offset	8
^Dx – Number of Labels per Cut	8
^Ex – Stop Position Setting	9
^FDEFAULT – Default Label Format in Memory	9
^Fname <CR> data – Download Label Format	9
^Gn – Sensor Mode	10
^Hx – Print Darkness	10
^Kname – Recall Label Format	10
^Lx,y[,z±] – Label Length	12
^Mx – Forward Length	12
^OCn – Applicator Mode (H-426 and H-434 ONLY)	13
^Ox – Stripper Sensor/Applicator	13
^Px – Number of Batches	13
^PAn – Auto Print	14
^PI – Auto Print Indefinitely	14
^Q – Begin Label Formatting	14
^Rx – Row Column Adjustment	14
^Sx – Speed Setting	15
^T+hhh.mm – Time Offset	15
^XGET,CONFIG – Returns Printer Configuration	15
^XGET,TPHRESISTANCE – Checks for bad printhead dots	15
^Wxx – Label Width Setting	16
^XSET,BACKFEED,n – Set Backfeed	16
^XSET,BUZZER,n – Set Buzzer	17
^XSET,CODEPAGE,p1 – Set Codepage	17
^XSETCUT,MODE,n	17
^XSET,DOUBLECUT,offset – Doublecut	17
^XSET,INVISIBLE,Vnn – Hide Field	18
^XSET,KEYBOARD,p1 – Set Keyboard	18
^XSET,LANGUAGE,n – Set Printer Language	18
^XSET,MEMORY,n – Memory Being Used (H-400/H-600 Series ONLY)	18
^XSET,MULTIJOB,0 – Multi-Job/Single-Job	19
^XSET,PASSWORD,p1,p2 – Password Protect Printer	19
^XSET,REWINDER,n – H-600 Rewind Status	19
^XSET,SLASHZERO,n – Slashed Zero	20
^XSET,SMARTBACK,n – Smart Backfeed	20
^XSET,TOPOFFORM,n – Top Of Form	20
^XSET,UNPROMPT,Vnn – Suppress prompt	20
^XSET,USBETHERNET,n – USB/Ethernet Port Switch	21
^XSETRTC,ISOWEEKNUM,n – ISO Week of the Year	21

^XSETRTC,LANGUAGE,n – Sets Language for Real Time Clock	21
^Yp1,p2,p3,p4 – Serial Port Settings	22
Control Commands	23
~B – Returns Firmware Version to the PC	23
~Dm,d,y,h,i,s – Set RTC Date/Time.....	23
~Ea,name,size – Graphic Download to Memory	23
~G – Graphic Mode	24
~H,TTF,filename,filesize<CR>data – Download TrueType Font (H-400/H-600 Series ONLY)	24
~Jn – Bitmapped Font Download	25
~Kn – Acknowledgement from RS-232	25
~L,DBASE,x,y – Download DbaseIII File to Printer	25
~L,SERIAL,name,data – Download Serial Data	26
~MDEL – Clear The Printer Memory	26
~MDEL* – Clears All Memory Including Asian and TrueType fonts.....	26
~MDELx,name – Clear Memory Item.....	27
~MDIR – Directory of Memory	27
~MGETF,p1 – Format Upload	27
~MGETS,name – Return Serial File Data	28
~MGETT,name – Read File Saved on Printer Memory	28
~MSETT,name<CR>nnnnnnnn<data> – Writes a .txt File to the Printer.....	28
~Px – Print Last Label	29
~Q±n – Row Offset Adjustment	29
~Rx – Rotate Printing	29
~S,CANCEL – Cancel Command	30
~S,CHECK <CR> aa,nnnn – Printer Status Check (H-400/H-600 Series ONLY)	30
~S,DUMP – Puts the Printer in Dump Mode	30
~S,FEED – Form Feed.....	31
~S,PAUSE – Pause	31
~S,RESET – Reset.....	31
~S,SENSOR – Sets Sensor Mode	31
~S,UNPAUSE – Un-Pause	32
~T – Test Print Head	32
~V – Print Version Message	33
~X7 – Print Database Information	33
~X8 – Print Serial Files Information	33
~Xn – Available space & object names	34
~Z – Reset Printer – (Non-immediate)	34
Label Formatting Commands	35
At,x,y,x_mul,y_mul,gap,rotation,data - Text (internal Fonts).....	35
ATt,x,y,w,h,g,r,r1,r2,data – TrueType Font (external) (H-400/H-600 Series ONLY).....	36
AT,x,y,w,h,g,r,r1,r2,data – TrueType Font (internal) (H-400/H-600 Series ONLY).....	37
Barcodes.....	37
Code	38
Sample.....	38
Sample.....	38
PDF 417	39
PBx, y, w, h, r, c, ec, len [, rotation] <CR> data.....	39
Px, y, w, hm, r, c, ec, len[, rotation] <CR> data	39
PCx,y,w,h,r,c,ec,max_len[,rotation] <CR> &*data&*	40
Maxicode.....	40
Datamatrix.....	41

GS1 Databar.....	41
C#x,y,±value,z – Counter Link Serial File	43
Cx,ys,±value,prompt – Serial Number Setting	44
Daa bb dd – Define Date Layout.....	44
Filedb,find,x,y – Find Specific Database Record	45
Filedb,move,x – Moves a pointer to a specific Database Record.....	45
Filedb,open,x – Opens Database.....	45
Gwxxx...x – Graphic Row	46
Hx,y,row_count,col_count,row_width,col_width,line_width – Table	47
La,x,y,x1,y1 – Draw Line	47
Qx,y,width,height <CR> data<CR> – Pattern Draw	47
Rx,y,x1,y1,lrw,ubw – Draw Rectangle.....	48
Th m s – Time Formatting.....	50
V#ADD,name,size,prompt – Descriptive Variables.....	50
V#ADDCHKSUM,Vnn – MOD 10 Check Digit	50
V#DEFAULT,Vnn,default_value – Variable Default Value	51
V#LINKDB,x,y – Substitutes Variable Database data.....	51
V#RENAME,name,x – Renames variables	51
V#SET,FLOATFORMAT,n,round_type,Vnn – Decimal Calculation.....	52
V#SET,THOUFORMAT,Vnntd[o] – Numeric Separation	52
V#STRCPY,Vxx,Vyy – Copy Variables.....	52
V#STRSET,Vnn,Vnn – Combines Multiple Variables	52
V#STRSUB,Vxx,Vyy,first,length – Copy Substring	53
V#SET,UNPROMPT,x – Disable Prompt for a Variable Field	53
Vt,x,y,x_mul,y_mul,gap,rotation,data – Text (Downloaded Fonts).....	53
Vxx,length,prompt[, jnl] – Define Variable Field	54
<i>NOTE:</i> There is a maximum number of 60 variables. Maximum 30 variables when downloading to the printer memory.....	54
V#OP+,V00,V01,V02 – Addition	54
V#OP-,V00,V01,V02 – Subtraction	55
V#OP*,V00,V01,V02 – Multiplication	55
V#OP/,V00,V01,V02 – Division	55
V#OP%,V00,V01,V02 – Remainder	56
Wx,y,mode,type,ec,mask,mul,len,rotate – QR Code.....	56
Yx,y,name – Recall Graphic	57
@ - Print Label.....	57
Appendix A - Examples.....	58
Constructing a format using TPL commands	58
Example	58
Appendix B – Barcode Details	59
Code 128 Subsets	59

Command / Data Types

The THARO Programming Language (TPL) is a high-level printer control language using simple ASCII text. It is ideally suited for label printing.

Some notable features are:

- Data fields are stored and NOT processed in memory until the printing instruction is received.
- Images, Fonts, and Label Formats can be downloaded and stored internally, and can be recalled and printed at a later date.

There are three basic types of commands: Setup, Control, and Label Formatting Commands. These can be identified by position in the command sequence or by a prefix.

Type	Prefix	Position	
Setup	^	Above the ^Q Separator	Control/Setup Commands
Control	~	Above the ^Q Separator	Label format Commands
Label Format	(none)	Below the ^Q Separator	

NOTE: (H-400/H-600 Series ONLY) Some of the commands are labeled as for the H-400 and H-600 Series printers ONLY. The H-400 Series includes the H-427 and H-436. The H-600 Series includes the H-626 and H-634. These commands will not function on other printers.

NOTE: Arithmetic commands are not allowed in the V Series printers.

NOTE: When downloading a database to the Printer memory, there is a 98 character limit in each database field.

Command Syntax

- No special characters are needed to create a label format. Any text editor may be used to enter commands.
- Where <CR> is shown, it may be a CR, LF, or CR/LF.
- For readability, parameters may be aligned with SPACES, TABS, or additional ZEROS in numeric parameters.
- Parameters are separated with a comma (,) or semicolon (;).
- Comment lines can be included by coding a semicolon (;) in the first position.
- Optional parameters are shown in command definitions within brackets [].

Setup Commands

Setup commands contain the printer control instructions, label configuration instructions, and downloading instructions

^Ax – Printing Mode

The ^Ax command determines if the printer is Direct Thermal or Thermal Transfer. This command enables or disables the Ribbon Out sensor.

Parameters: Set x = D for Direct Thermal Mode (disables Ribbon Out sensor) or
Set x = T for Thermal Transfer Mode (enables Ribbon Out sensor).

Command Format / Usage:

^AT <CR> Puts the printer into Thermal Transfer Mode and enables the Ribbon Out sensor

^Bx – Backward Length

The ^Bx command immediately moves the label stock backwards.

Parameters: x = The length to move the label stock backwards in millimeters.

Command Format / Usage:

^B10 <CR> Moves the label back 10mm

NOTE: This command will generally not be used. It does not set a presentation position.

^Cx – Batch Size

The ^Cx command specifies the number of copies of the same label (no incrementing). Labels printed are expected to be identical in every way.

Parameters: x = A positive numeric value with a maximum of 32767.

Command Format / Usage:

^C5 <CR> Prints 5 copies per batch

NOTE: It is easy to confuse Number of Batches with Batch Size. When using variable data, such as an incremented field, the ^Px command (Number of Batches) will increment the field, while the ^Cx (Batch Size) command will print multiple identical labels without incrementing the field.

^D+dddd.hh – 4-digit Date Offset

The ^D+dddd.hh command is used to offset the date, for example, to place an expiration date on a label.

Parameters: dddd = A 4 digit value for day shift
hh = A 2 digit value for hour shift from 0 to 23

Command Format / Usage:

^D+1460.00 <CR> Adds 1460 days (4 years) to the current date for use as an expiration date

^D+V00.V01 – Variable Date Offset

The ^D+V00.V01 command is used to offset the date, for example, to place a variable expiration date on a label.

Parameters: V00 = A numeric value containing the number of days to shift
V01 = A numeric value containing the number of hours to shift

Command Format / Usage:

^D+V00.V01 <CR> If V00 = 030 and V01 = 00 then, this command would offset the date by 30 days.

NOTE: See **^T+hhh.mm on page 14 for Time commands**

^Dx – Number of Labels per Cut

The ^Dx command specifies the number of labels to print between cuts.

Parameters: Set x = 0 to disable cutting or
x = A positive numeric value with a maximum of 32767.

Command Format / Usage:

^D2 <CR> Cuts every other label.

NOTE: Do not confuse this Control Command with the ^D used for Date.

^Ex – Stop Position Setting

The ^Ex command specifies the Stop Position Setting in millimeters to feed the label to the proper point for peel operation or tear off.

Parameters: x = 0.0 - 40.0.

Command Format / Usage:

^E10.0 <CR> Advances the label 10mm for tear off.

m1	JUL
----	-----

^FDEFAULT – Default Label Format in Memory

The ^FDEFAULT command, when used with ^Fname command (page 9) sets a format named DEFAULT as the label format that will be ready to print when the printer is powered on and the keyboard is connected.

Parameters: *None*

Command Format / Usage:

^FDEFAULT Sends a label format to the printer memory named DEFAULT. When the printer is powered on, the label format named DEFAULT will be loaded into memory and be available for printing. The keyboard must be connected to the printer when the printer is powered on.


^Fname <CR> data – Download Label Format

The ^Fname <CR> data command is used to download a label format into FLASH memory. After the download is completed, the printer will beep once.

Parameters: name = The name of the format.

data = The formatting commands for the label to be downloaded.

Command Format / Usage:

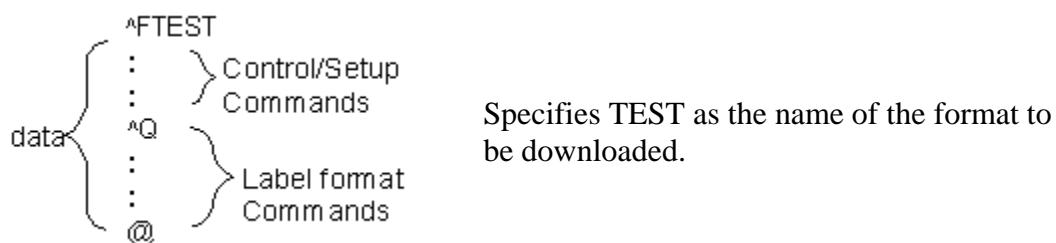

NOTE: The format name can be up to 19 characters, and must consist of A-Z, a-z, 0-9, and punctuation.

^Gn – Sensor Mode

The ^Gn command sets the mode for the printer sensor.

Parameters: n = a positive number which determines the specific sensor mode.
0 = Reflect
1 = See through
2 = Auto mode

Command Format / Usage:

^G1 Sets the printer sensor to see through mode.

^Hx – Print Darkness

The ^Hx command is used to specify the heat setting of the printer. This determines how dark the label will print.

Parameters: x = A positive numeric value with a maximum of 19.

Command Format / Usage:

^H6 <CR> Sets the Print Darkness to 6.

NOTE: Generally, the lower the value of x, the longer the print head will last.

^Kname – Recall Label Format

The ^Kname command is used to recall a label format from the printer's FLASH memory.

Parameters: name = The name of the label to be recalled.

Command Format / Usage:

Specifies TEST as the name of the format to be recalled, and prints 2 copies.

```
^KTEST
:      }data
@      }
:      }Control/Setup command
~P2
```

If the format to be printed contains variable fields, simply place the data between the ^Fname command and the @ command.

Example:

Example A	Description	Result
<pre>^KTEST 0123 Book 01234540124 12.59 @ ~P1</pre>	<p>Recall label format without changing the label format</p> <p>C0 = 0123 V00=Book</p> <p>V01= 01234540124</p> <p>V02= 12.59</p> <p>Print the last label</p>	<p>Serial #: 0123 Product #: Book Price : \$12.59</p>  <p>JUN/20/2003::16:11:27</p>  <p>0 12345 40124 4</p>

$^{\wedge}Lx,y[,z\pm]$ – Label Length

The $^{\wedge}Lx,y(z\pm)$ command is used to specify the length of the label. (length, gap length, [plain paper feed length])

Parameters: For *Die Cut Label* –

x = Label length in millimeters

y = Gap length in millimeters

For *Plain Paper* –

x = Label length in millimeters

y = 0 (constant)

z = Feed paper length in millimeters

For *Black Mark Label* –


x = Label length in millimeters

y = Black mark width in millimeters

z = Black line to top of form position

$z+$ = When the position is outside the black mark

$z-$ = When the position is within the black mark

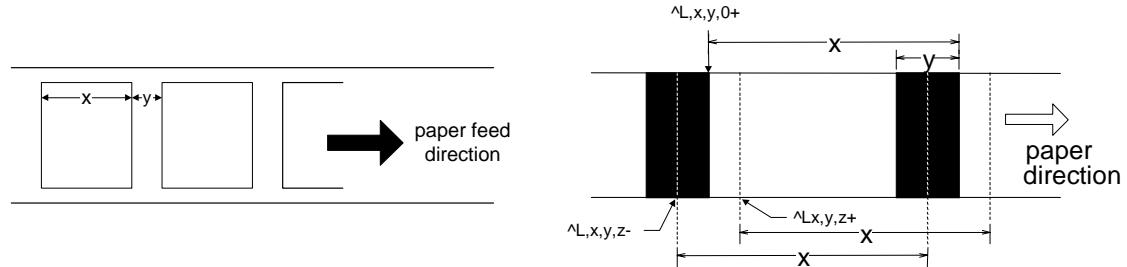

Command Format / Usage:

L25,3 <CR> Sets the length of the label to 25mm and the gap length to 3mm.

$^{\wedge}Mx$ – Forward Length

The $^{\wedge}Mx$ command immediately moves the label stock forward.

Parameters: x = The length to move the label stock forward in millimeters.

Command Format / Usage:

^M10 <CR> Moves the label ahead 10mm

NOTE: This command will generally not be used. It does not set a presentation position.

^OCn – Applicator Mode (H-426 and H-434 ONLY)

The ^OCn command enables Applicator Mode by moving the stripper sensor signal to the cutter port

Parameters: Set n = 1 to enable Applicator Mode, or
Set n = 0 to disable Applicator Mode

Command Format / Usage:

^OC1 <CR> Enable Applicator Mode in the printer.

^Ox – Stripper Sensor/Applicator

The ^Ox command is used to enable or disable the Stripper Sensor or Applicator

Parameters: Set x = 0 to disable the Stripper Sensor and Applicator
Set x = 1 to enable the Stripper Sensor.
Set x = 2 to enable the Applicator

Command Format / Usage:

^O0 <CR> Disables the Stripper Sensor
^O1 <CR> Enables the Stripper Sensor
^O2 <CR> Enables Applicator Mode (**H-400/H-600 Series ONLY**)

Note: When using the H-600 Series printer, be sure to look at the ^XSET,REWINDER command on page 17 to enable the rewind also.

^Px – Number of Batches

The ^Px command is used to specify the number of batches to be printed. (incremented)

Parameters: x = A positive numeric value with a maximum of 32767.

Command Format / Usage:

^P5 <CR> Prints 5 batches

NOTE: It is easy to confuse Number of Batches with Batch Size. When using variable data, such as an incremented field, the ^Px command (Number of Batches) will increment the field, while the ^Cx (Batch Size) command will print multiple identical labels without incrementing the field.

Example: **^P10** This will set Batches to 10 and Batch Size to 2, which will increment
 ^C2 the label 10 times, and print 2 copies of each label.

^PAn – Auto Print

The ^PAn command specifies the number of batches to print, then immediately starts printing the labels upon receiving all counters and variables.

Parameters: n = 1 - 30000.

Command Format / Usage:

^PA5 <CR> Immediately prints 5 batches

^PI – Auto Print Indefinitely

The ^PI command is used to immediately start printing upon receiving all counters and variables, and continue printing indefinitely, until the printer is turned off, or the cancel button is pressed.

Parameters: No Parameters.

Command Format / Usage:

^PI <CR> Starts printing indefinitely

^Q – Begin Label Formatting

Indicates the start of the label formatting commands.

Parameters: ‘M’ will cause the printer to print a mirror image of the label.
‘I’ will cause the printer to print an inverse image of the label.
(white on black instead of black on white)

Command Format / Usage:

^Q <CR> Prints the label normally
^QM <CR> Prints a mirror image of the label
^QI<CR> Prints an inverse image of the label.

^Rx – Row Column Adjustment

The ^Rx command is used to set the left margin (in dots).

Parameters: x = A positive numeric value with a maximum of 399.

Command Format / Usage:

^R20 <CR> Sets the left margin 20 dots from the left edge.

^Sx – Speed Setting

The ^Sx command is used to specify the print speed in inches per second.

Parameters: x = 2-7 for the H-427
2-6 for the H-426, H-436, H-626, V-426
2-4 for the H-434, H-634, V-424 Plus and V-434 Plus
2-3 for the V-433

Command Format / Usage:

^S3 <CR> Sets the print speed to 3

^T+hhh.mm – Time Offset

Similar to the ^D+hhh.mm command, the ^T+hhh.mm command is used to offset the current time by a specified value.

Parameters: hhh = a 3 digit value for hours.
mm = a 2 digit value for minutes from 00 to 59.

Command Format / Usage:

^T+012.00 <CR> Adds 12 hours to the current time.

NOTE: See **^D+V00.V01 on page 8 for the Date offset command**

^XGET,CONFIG – Returns Printer Configuration

The ^GET,CONFIG command will return printer configuration data using Windows HyperTerminal and serial communications. This is similar to a printer self test label.

Parameters: None

Command Format / Usage:

Send this command to the printer via bidirectional communication such as the serial port through Windows HyperTerminal. The printer will return the configuration back to HyperTerminal.


^XGET,TPHRESISTANCE – Checks for bad printhead dots

The ^XGET,TPHRESISTANCE command checks the resistance of each dot on the printhead and returns the results back to the PC.

Parameters: None

Command Format / Usage:

Send this command to the printer via bidirectional communication such as the serial port through Windows HyperTerminal. Measure TPH Dot will be displayed on the LCD panel along with a number counting up as the printhead is checked. The printer will return the results back to the PC as shown in the image below.

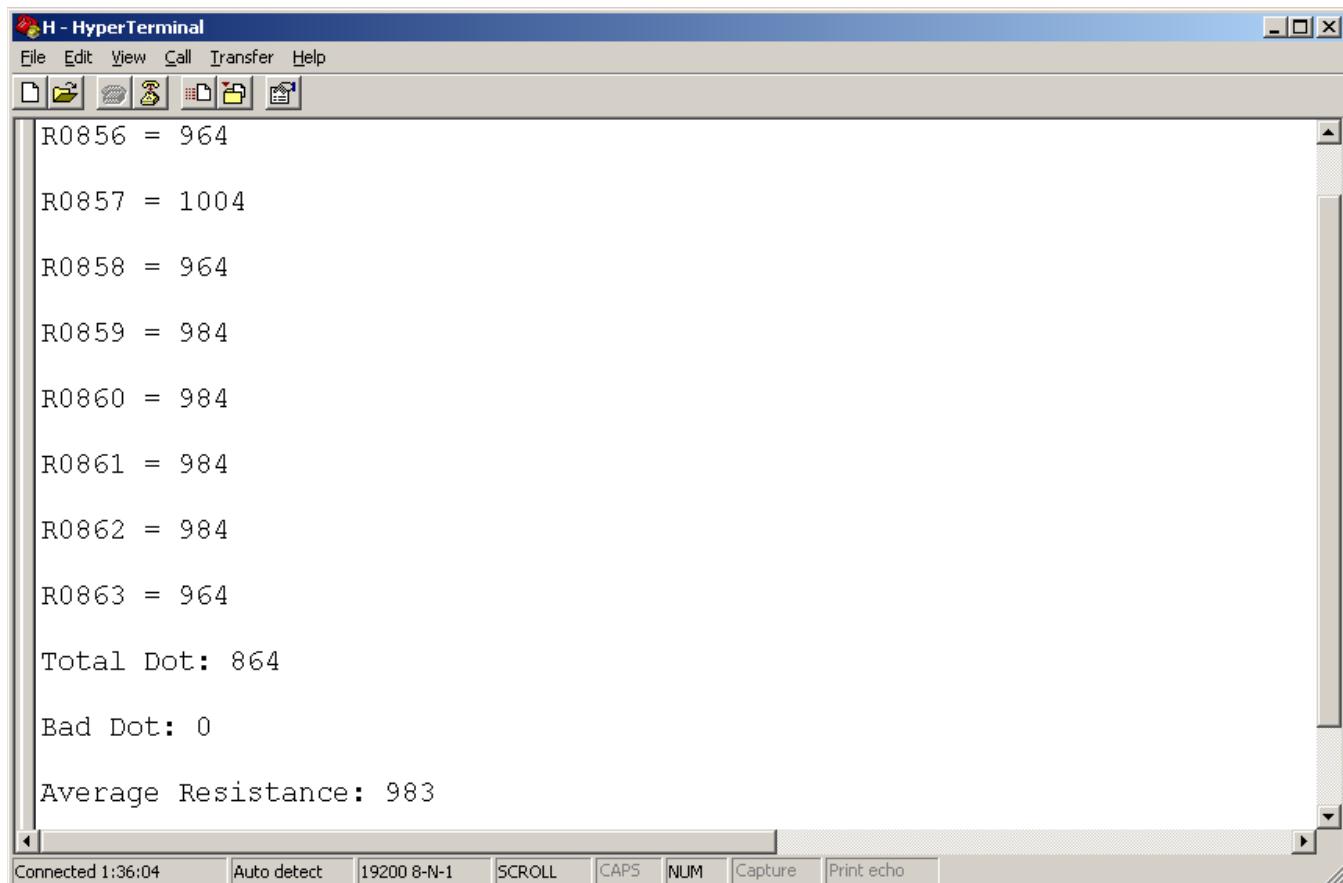

The screenshot shows a window titled "H - HyperTerminal". The menu bar includes "File", "Edit", "View", "Call", "Transfer", and "Help". Below the menu is a toolbar with icons for copy, paste, cut, find, etc. The main window displays the following text:

```
R0856 = 964
R0857 = 1004
R0858 = 964
R0859 = 984
R0860 = 984
R0861 = 984
R0862 = 984
R0863 = 964
Total Dot: 864
Bad Dot: 0
Average Resistance: 983
```

At the bottom, a status bar shows "Connected 1:36:04", "Auto detect", "19200 8-N-1", "SCROLL", "CAPS", "NUM", "Capture", and "Print echo".

^Wxx – Label Width Setting

The ^Wxx command specifies the width of the label to be printed.

Parameters: x = The width of the label in millimeters.

Command Format / Usage:

^W100 <CR> Sets the label width to 100mm

^XSET,BACKFEED,n – Set Backfeed

The ^XSET,BACKFEED,n command sets the distance to backfeed the label.

Parameters: n = the distance to backfeed

Command Format / Usage:

^XSET,BACKFEED,5 <CR> Backfeeds the label 5mm

^XSET,BUZZER,n – Set Buzzer

The ^XSET,BUZZER,n command is used to turn the printer's buzzer on or off.

Parameters: Set n = 0 for Off or
Set n = 1 for On.

Command Format / Usage:

^XSET,BUZZER,1 <CR> Turns on the printer's buzzer

^XSET,CODEPAGE,p1 – Set Codepage

The ^XSET,CODEPAGE,pn command is used to determine which codepage to use. (850 or 852)

Parameters Set p1 = 0 for codepage 850(Multilingual) or
Set p1 = 1 for codepage 852(Slavic).

Command Format / Usage:

^XSET,CODEPAGE,p0 <CR> Sets the Codepage to 850

^XSETCUT,MODE,n

The ^XSETCUT,MODE,n command is reserved for future use.

^XSET,DOUBLECUT,offset – Doublecut

The ^XSET,DOUBLECUT,offset command allows the printer to cut twice per label

Parameters: Set offset = 0 to disable doublecut
Set offset to mm to cut. (This must be less than the length of the label).

Command Format / Usage:

^XSET,DOUBLECUT,10<CR> Cuts each label at 10mm from the leading edge, and again at the gap.

^XSET,INVISIBLE,Vnn – Hide Field

The ^XSET,INVISIBLE,Vnn command allows for non-printed variables to be used for calculations and string concatenations.

Parameters: Vnn = the field to be hidden

Command Format / Usage:

^XSET,INVISIBLE,V10 <CR> Makes the Variable: V10 invisible

^XSET,KEYBOARD,p1 – Set Keyboard

The ^XSET,KEYBOARD,p1 command specifies the language for the keyboard.

Parameters: Set p1 = 0 for US or
Set p1 = 1 for UK or
Set p1 = 2 for French or
Set p1 = 3 for German or
Set p1 = 4 for Spanish or
Set p1 = 5 for Italian or
Set p1 = 6 for Finnish or
Set p1 = 7 for Dutch or
Set p1 = 8 for Belgian

Command Format / Usage:

^XSET,KEYBOARD,0 <CR> Sets the keyboard locale to the US

^XSET,LANGUAGE,n – Set Printer Language

The ^XSET,LANGUAGE,n command sets the language for the RTC and the LCD

Parameters: Set n = 0 for English or
Set n = 1 for German or
Set n = 2 for French or
Set n = 3 for Spanish or
Set n = 4 for Italian or
Set n = 5 for Simplified Chinese or
Set n = 6 for Traditional Chinese or
Set n = 7 for Turkish

Command Format / Usage:

^XSET,LANGUAGE,0<CR> Sets the printer's language to English

^XSET,MEMORY,n – Memory Being Used (H-400/H-600 Series ONLY)

The ^XSET,MEMORY,n command instructs the printer to use the internal FLASH memory or a Compact FLASH card in the Compact FLASH slot.

Parameter: Set n = 0 to use the internal FLASH memory
Set n = 1 to use the Compact FLASH card

Command Format / Usage:

<code>^XSET,MEMORY,0</code>	Printer will use the FLASH memory in the printer.
<code>^XSET,MEMORY,1</code>	Printer will use the Compact FLASH card

^XSET,MULTIJOB,0 – Multi-Job/Single-Job

The ^XSET,MULTIJOB,0 command enables Single-Job printing or Multi-Job printing.

Parameters: 0 = Single Job- Only one job in the printer at a time
1 = Multi Job- More than one job in the printer at a time

Command Format / Usage:

`^XSET,MULTIJOB,0<CR>` Turns on Single-Job printing

^XSET,PASSWORD,p1,p2 – Password Protect Printer

The ^XSET,PASSWORD,p1,p2 command is used to password-protect the front panel of the printer.

Parameters: Set p1 = 1 to enable the password
Set p1 = 0 to disable the password
Set p2 = 4 digit password.

Command Format / Usage:

`^XSET,PASSWORD,1,1234<CR>` Enables the password: 1234

^XSET,REWINDER,n – H-600 Rewind Status

The ^XSET,REWINDER,n command is used to turn the H-600 rewind on or off.

Parameters: Set n = 0 to disable the rewind
Set n = 1 to enable the rewind

Command Format / Usage

<code>^XSET,REWINDER,0 <CR></code>	Disables the rewind
<code>^XSET,REWINDER,1 <CR></code>	Enables the rewind

^XSET,SLASHZERO,n – Slashed Zero

The ^XSET,SLASHZERO,n command allows the printer to print a slashed zero. This applies to internal Triumvirate (CPI) fonts only.

Parameters: Set n = 1 for slashed zero
Set n = 0 for no slash in the zeros

Command Format / Usage:

^XSET,SLASHZERO,I<CR> Turns on Slashed Zeros

^XSET,SMARTBACK,n – Smart Backfeed

The ^XSET,SMARTBACK,n command enables smart backfeed in the printer. This prints the first portion of the second label so the first label can be presented, and the second label can finish printing without backfeeding.

Parameters: Set n = 1 to enable, or
Set n = 0 to disable.

Command Format / Usage:

^XSET,SMARTBACK,I<CR> Turns on Smart Backfeed

^XSET,TOPOFFORM,n – Top Of Form

The ^XSET,TOPOFFORM,n command enables or disables the top of form feature in the printer. This feature will tell the printer to either feed a blank label (ON) or immediately start to print without first feeding a blank label (OFF) upon power up or after opening and closing the print head. Default is ON.

Parameters: Set n = 0 top of form OFF
Set n = 1 top of form ON

Command Format / Usage:

^XSET,TOPOFFORM,0<CR> Turns off the Top Of Form feature

^XSET,UNPROMPT,Vnn – Suppress prompt

The ^XSET,UNPROMPT,Vnn command hides the prompt for a specified variable field.

Parameters: Vnn = The specified field

Command Format / Usage:

^XSET,UNPROMPT,V10 <CR> Suppress' the prompt for Variable field: V10

^XSET,USBETHERNET,n – USB/Ethernet Port Switch

The ^XSET,USBETHERNET,n command sets the port to use either USB or Ethernet. The Ethernet module and USB port share the same connection route. If the USB port is set to active then the Ethernet module will be deactivated and visa versa.

Parameters: n = 0 Sets the port to use USB
n = 1 Sets the port to use the Ethernet card.

Command Format / Usage:

^XSET,USBETHERNET,1 Enables the Ethernet module and disables the USB port.

Note: An Ethernet card must be connected to use this command

^XSETRTC,ISOWEEKNUM,n – ISO Week of the Year

The ^XSETRTC,ISOWEEKNUM,n command turns on the ISO week of the year option.

Parameters: Set n = 1 for on or
Set n = 0 for off.

Command Format / Usage:

^XSETRTC,ISOWEEKNUM,1<CR> Turns on the Iso Week of the Year option.

^XSETRTC,LANGUAGE,n – Sets Language for Real Time Clock

The ^XSETRTC,LANGUAGE,n command sets the language of the Real Time Clock.

Parameters: Set n = 0 for English
Set n = 1 for German
Set n = 2 for French
Set n = 3 for Spanish
Set n = 4 for Italian.

Command Format / Usage:

^XSETRTC,LANGUAGE,0<CR> Sets the RTC to English.

^Yp1,p2,p3,p4 – Serial Port Settings

The ^Yp1,p2,p3,p4 command is used to specify the Serial port settings on the printer when there is no front panel (V-series).

Parameters:	Set p1 = 48 for 4800bps or Set p1 = 96 for 9600bps or Set p1 = 19 for 19200bps or Set p1 = 38 for 38400bps or Set p1 = 57 for 57600bps or Set p2 = N for No Parity or Set p2 = O for Odd Parity or Set p2 = E for Even Parity Set p3 = 7 or 8 Set p4 = 1 or 2	(Baud Rate) (Parity) (Data Bits) (Stop Bits)
--------------------	--	---

Command Format / Usage:

^Y96,N,8,1 <CR> Sets the serial port to 9600bps, No Parity, 8 Data Bits, and 1 Stop Bit

Control Commands

Control commands cause the printer to take immediate action, such as clearing memory, feeding a label.

~B – Returns Firmware Version to the PC

The ~B command is used to return the model number and firmware version of the printer to the PC. This can be done using the serial port and Windows Hyperterminal.

Parameters: None

Command Format / Usage

With the printer connected through the serial cable, open the Windows HyperTerminal and send the ~B command. The printer will return the model number and firmware version of the printer back to HyperTerminal.

~Dm,d,y,h,i,s – Set RTC Date/Time

The ~Dm,d,y,h,i,s command sets the Date and Time of the printer. A maximum of 20 different formats are supported on each label.

Parameters:

m	month (01 to 12)	y	Year (last two digits of year)
mn1	month (1 to 12)	h	Hour (00 to 23)
d	Date (01 to 31)	i	Minutes (00 to 59)
dd1	Date (1 to 31)	s	Seconds (00 to 59)

Command Format / Usage:

~D01,11,05,11,00,00 <CR> Sets the printer's real-time clock to 01/11/05 11:00:00AM

~Ea,name,size – Graphic Download to Memory

The ~Ea,name,size command is used to download a monochrome image into FLASH memory. The printer will beep once after the download is completed.

Parameters: Set a = P for PCX file or B for BMP file.

name = unique name of image (up to 20 characters)
size = Size of image in bytes (maximum 512Kb)

Command Format / Usage:

~EB,TEST,524288 <CR> 1. Downloads a 512Kb graphic named TEST.BMP to the memory.
 2. The image must then be downloaded to the printer. It can be
 copied through DOS for example “copy test.bmp lpt1:/b”
 3. Copy the formatting commands to the printer to call the image.

^AT
^L25,3
^W84
^R0
^H2
^S2
^E.0
~R106
^C1
^Q
Y386,80,TEST
@

~G – Graphic Mode

The ~G command places the printer in the image receiving mode.

Parameters: *None*

Command Format / Usage:

~G <CR> Puts the printer in image receiving mode.

NOTE: Generally, the ~G command is used with Windows Drivers where entire image is a bitmap

~H,TTF,filename,filesize<CR>data – Download TrueType Font (H-400/H-600 Series ONLY)

The ~H,TTF,filename,filesize,<CR>data command is used to download a TrueType font file to the printer memory.

Parameters: filename = font name
 filesize = size of fonts in bytes
 data = TTF file

Command Format / Usage

~H,TTF,ZARIAL,262144<CR>font file data
measuring 262144bytes in size to the printer

Downloads the Arial font file named Z,

~Jn – Bitmapped Font Download

The ~Jn command is used to download a bitmapped font to the printer FLASH memory. The printer will beep once after the download is completed. The printer supports up to 26 downloaded fonts named with letters from A to Z.

Parameters: n = a character from A to Z to specify a font.

Command Format / Usage:

~JK <CR> Specifies the next font to be downloaded will be named K

To download the font to the printer, send the ~Jn command to the printer. Then, copy the font to the printer.

Example: C:>COPY CON LPT1:

~JK

^Z (Ctrl Z)

C:>COPY HVR0OE1A.SFP LPT1:/B

NOTE: The font to be downloaded to the printer must be a font compatible to an HP Soft Font, like that used in an HP Laser Jet II Plus (PCL-4). Also, note that the font identifier must be unique. If a font is downloaded, and assigned a letter that is already in use, the printer will show "REPEAT FILE NAME", and the download will not be accepted.

~Kn – Acknowledgement from RS-232

The ~Kn command is used to receive acknowledgement from the printer via Serial communications. When the command is enabled, A "Y"(0D0A) is returned after each label is printed. This is used to verify that each label is successfully printed.

Parameters: Set n = 0 to disable acknowledgement, or
Set n = 1 to enable acknowledgement.

Command Format / Usage:

~K1 <CR> Enables Serial Acknowledgement

~L,DBASE,x,y – Download DbaseIII File to Printer

The ~L,DBASE,x,y command is used to download a new dbaseIII file to the printer.

Parameters: x = The name of the database to Download
y = The database size in bytes.

Command Format / Usage:

~L,DBASE,new,670 <CR>

Downloads a new database file named new with a size of 670 bytes.

~L,SERIAL,name,data – Download Serial Data

The ~L,SERIAL,name,data command is used to download a new serial file to the printer.

Parameters: name = The name of the Serial File to Download
data = The starting value of the serial file to be downloaded.

Command Format / Usage:

~L,SERIAL,new,1234567895 <CR>

Creates a new serial file named new with a starting value of 1234567895

~MDEL – Clear The Printer Memory

The ~MDEL command clears everything in the printer's FLASH and DRAM memory.

Parameters: *None*

Command Format / Usage:

~MDEL <CR> Clears the printer's memory

NOTE: Use caution with this command as ALL memory is cleared.

~MDEL* – Clears All Memory Including Asian and TrueType fonts

The ~MDEL* command clears everything in the printer's FLASH and DRAM memory.

Parameters: *None*

Command Format / Usage:

~MDEL <CR>* Clears the printer's memory

NOTE: Use caution with this command as ALL memory is cleared.

~MDELx,name – Clear Memory Item

The ~MDELx,name command is used to delete individual files

Parameters:

Set x = A for Asian font
Set x = C for TrueType Font file
Set x = D for database
Set x = E for Bitmapped font file type.
Set x = F for label form file type
Set x = G for graphic file
Set x = S for Serial file
Set x = T for text file

name = The name of the file to be deleted.

Or when x=C ID. Where ID is the TrueType font TTF ID (A~Z)

Command Format / Usage:

~MDELG,Bus <CR> Deletes a graphic named Bus from the printer's memory

~MDIR – Directory of Memory

The ~MDIR command sends a listing of the memory contents to the PC via the Serial interface.

Parameters: None

Command Format / Usage:

~MDIR <CR> Returns directory and file size information of FLASH memory to the PC.

~MGETF,p1 – Format Upload

The ~MGETF,p1 command is used to upload a label format from the printer to the PC, via the serial interface. This will not affect the original file in the printer memory.

Parameters: p1 = filename to be uploaded.

Command Format / Usage:

~MGETF,TEST <CR> Uploads a file called TEST from the printer to the PC

~MGETS,name – Return Serial File Data

The ~MGETS,name command is used to return information about the serial file to the PC

Parameters: name = The name of the serial file stored on the printer.

Command Format / Usage:

~MGETS,new <CR> Returns the contents of the serial file “new” on the PC screen.

NOTE: For serial interface only

~MGETT,name – Read File Saved on Printer Memory

The ~MGETT,name command is used to return a text file that is in the printer memory back to the PC through Windows HyperTerminal.

Parameters: name = The name of the file stored on the printer.

Command Format / Usage:

~MGETT,new <CR> Returns the contents of the file “new” that was sent to the printer using the ~MSETT command to the PC screen.

NOTE: For serial interface only through HyperTerminal.

~MSETT,name<CR>nnnnnnnn<data> – Writes a .txt File to the Printer

The ~MSETT,name<CR>nnnnnnnn<data> command is used to send a text file to the printer memory.

Parameters: name = The name of the saved text file.

nnnnnnnn = data size in bytes (maximum 8 digits)

data = data to be saved

Command Format / Usage:

~MSETT,new<CR>00000015test format Saves a text file named new that has a file size of 15 bytes and contains the data “test format” to the flash memory of the printer.

NOTE: For serial interface only

~Px – Print Last Label

The ~Px command repeatedly prints the indicated number of labels using the last label format. An incrementing/decrementing serialized number (^C0) will continue where it left off last.

Parameters: x = a positive numeric value from 1 to 32767.

Command Format / Usage:

~P5 <CR> Prints 5 batches starting from the last label format

~Q±n – Row Offset Adjustment

The ~Q±n command is used to set the vertical offset of the label in dots. This is used if the format is printing too high or too low on the label.

Parameters: n = a numeric value from -100 to 100

Command Format / Usage:

~Q-10 <CR> Sets the vertical offset 10 dots higher on the label than the default.

~Rx – Rotate Printing

The ~Rx command is used to rotate the label format 180 degrees.

Parameters: x = label width in millimeters. 1 to 104 for the H-4xx printers.
1 to 168 for the H-6xx printers.

Command Format / Usage:

~R100 <CR> Rotates the format 180 degrees with a label width of 100mm

NOTE: To return to the original print direction, set the x value greater than 104 or 168

Example:

Example	Description	Result
^L40,2 ^W50 ^S6 ^H10 ~R50 ^Q AC,35,11,1,1,1,0,ROTATE BB,20,45,2,5,50,0,1,1234567	Label size is 40 mm(h) x 50 mm(w); 2 mm gap Rotate the label format 180 for printing	

@ ~R105 ^Q AC,20,10,1,1,1,0,ROTATE BB,20,45,2,5,50,0,1,1234567 @	Disable the rotate function on a 4" printer	ROTATE  1234 5670
---	---	---

~S,CANCEL – Cancel Command

The ~S,CANCEL command cancels the print job. It is the same as if the user pressed the cancel button on the front panel of the printer.

Parameters: *None*

Command Format / Usage:

~S,CANCEL <CR> Cancels the print job in the printer.

~S,CHECK <CR> aa,nnnnn – Printer Status Check (H-400/H-600 Series ONLY)

The ~S,CHECK <CR> aa,nnnnn command retrieves the printer status.

Parameters: aa = printer status information

00	= Ready
01	= Paper out
02	= Paper jam or missed gap
03	= Ribbon out
04	= Print head open
05	= Rewinder Full
06	= Memory is full
07	= Filename cannot be found
08	= Filename is Repeat
09	= Syntax error
20	= Pause
21	= In Setting Mode
22	= In Keyboard Mode
50	= Printer is printing
60	= Processing Data

nnnnn = number of remaining labels / 00000 - 32000

Command Format /Usage

~S,CHECK<CR> 03,4401 Return is ribbon out with 4401 labels left to print

~S,DUMP – Puts the Printer in Dump Mode

The ~S,DUMP command puts the printer in dump mode for troubleshooting purposes.

Parameters: *None*

Command Format / Usage:

~S,DUMP <CR> Puts the printer in dump mode. Dump mode is a function of the printer in which the printer will print the commands sent to it in an ASCII text form.

Note: Cycle the power on the printer to take the printer out of dump mode.

~S,FEED – Form Feed

The ~S,FEED command feeds the label stock to the next gap.

Parameters: *None*

Command Format / Usage:

~S,FEED <CR> Feeds the label stock to the next gap.

~S,PAUSE – Pause

The ~S,PAUSE command is used to send an immediate pause to the printer.

Parameters: *None*

Command Format / Usage:

~S,PAUSE <CR> Pauses printing

~S,RESET – Reset

The ~S,RESET command is used to reset the printer. It is an immediate command..

Parameters: *None*

Command Format / Usage:

~S,RESET <CR> Resets the printer

~S,SENSOR – Sets Sensor Mode

The ~S,SENSOR command is used to autosense the gap in the label stock. It is an immediate command. It is the same as doing an Auto Sensing on the front panel of the printer.

Parameters: *None*

Command Format / Usage:

`~S,SENSOR` Autosenses the gap in the label stock.

~S,UNPAUSE – Un-Pause

The `~S,UNPAUSE` command is used to reverse the effect of the `~S,PAUSE` command when printing via Serial.

Parameters: *None*

Command Format / Usage:

`~S,UNPAUSE <CR>` Un-Pauses printing

~T – Test Print Head


The `~T` command immediately prints a pattern for the user to determine if the print head is damaged.

Parameters: *None*

Command Format / Usage:

`~T <CR>` Prints a print head test page

Example:

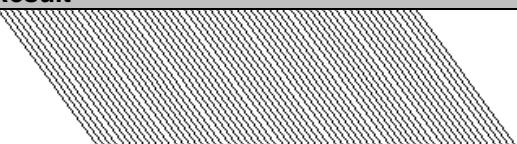Example	Result
<code>~T</code>	

~V – Print Version Message

The ~V command prints the firmware version and feeds to the next label.

Parameters: *None*

Command Format / Usage:

~V <CR> Returns the firmware version

Example:

Example	Result
~V	# # # H-426 # # # # # # VER. X.XX # # #

~X7 – Print Database Information

The ~X7 command prints a test label displaying the database data stored in the printer's memory, as well as available memory in the printer.

Parameters: *None*

Command Format / Usage:

~X7 <CR> Prints number of Databases in memory and Free Memory Space in bytes.

~X8 – Print Serial Files Information

The ~X8 command prints a test label displaying the number and names of serial files stored in the printer's memory, as well as available memory in the printer.

Parameters: *None*

Command Format / Usage:

~X8 <CR> Prints number of Serial Files in memory and Free Memory Space in bytes.

~Xn – Available space & object names

The ~Xn command prints the available space in the printer memory in bytes and object names.

- Parameters:**
- Set n = 1 Print label format names and available space in memory.
 - Set n = 2 Print graphic names and available space in memory.
 - Set n = 3 Print Bitmapped font names and available space in memory.
 - Set n = 4 Print the name of the label formats, graphics, fonts, and available space in memory.
 - Set n = 5 Print Asian font names and available space in memory
 - Set n = 6 Display the total printed length on the LCD

Command Format / Usage:

~X1 <CR> Prints the format names in memory and available space in memory.

~Z – Reset Printer – (Non-immediate)

The ~Z command resets the printer. The command is non-immediate. The printer will finish any jobs that precede this command. Does not affect FLASH memory.

- Parameters:** *None*


Command Format / Usage:

~Z <CR> Resets the printer

Label Formatting Commands

Label formatting commands define the field data, such as Line, Rectangle, Barcode, Text and images.

Setting the X and Y values:

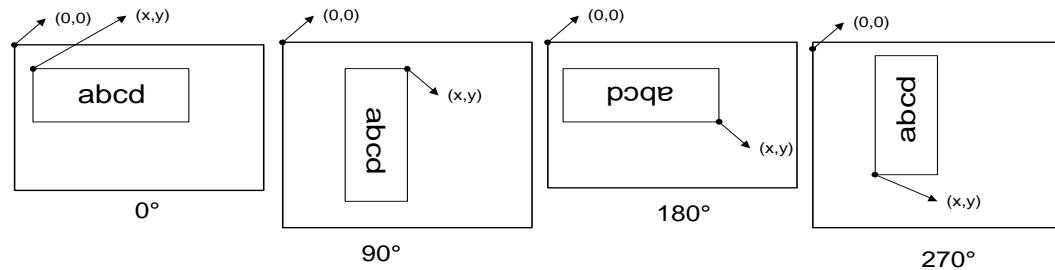

At,x,y,x_mul,y_mul,gap,rotation,data - Text (internal Fonts)

The At,x,y,x_mul,y_mul,gap,rotation,data command is used to print text using internal fonts.

Parameters: t = an alpha character from A to L to specify a font. (see table)

x = Top Left Horizontal position of text (in dots)

y = Top Left Vertical position of text (in dots)

x_mul = Horizontally magnified up to 8 times as large

y_mul = Vertically magnified up to 8 times as large

gap = Additional Distance to add between characters (in dots)

rotation = Add 'I' to field orientation for the field to print inverse(white on black)

0 = normal

1 = rotated 90 degrees

2 = rotated 180 degrees

3 = rotated 270 degrees

data = A string up to 239 characters long, that can be a Constant, Date/Time information, a serial variable, or variable data

Command Format / Usage:

AA,10,10,3,3,10,0,TEST <CR>

Prints the word TEST starting at 10,10 and multiplying the font by a factor of 3, and an additional gap of 10

203DPI			300DPI		
Font	Points	Font Style	Font	Points	Font Style
A	6	CG Triumvirate	A	4	CG Triumvirate
B	8	CG Triumvirate	B	5.3	CG Triumvirate
C	10	CG Triumvirate	C	6.7	CG Triumvirate
D	12	CG Triumvirate	D	8	CG Triumvirate
E	14	CG Triumvirate	E	9.3	CG Triumvirate
F	18	CG Triumvirate	F	12	CG Triumvirate
G	24	CG Triumvirate	G	16	CG Triumvirate
H	30	CG Triumvirate	H	20	CG Triumvirate
I	16x26 dots for US ASCII 8 bit		I	24	CG Triumvirate
K		OCR-B	J	10.7x17.3 dots for US ASCII 8 bit	
L		OCR-A	K		OCR-B
			L		OCR-A

ATt,x,y,w,h,g,r,r1,r2,data – TrueType Font (external) (H-400/H-600 Series ONLY)

The ATt,x,y,w,h,g,r[I],r1,r2,data command is used to print downloaded TrueType fonts.

Parameters: t = TrueType Font name (values are A through Z).

x = Top Left Horizontal position of text (in dots)

y = Top Left Vertical position of text (in dots)

w = width (in dots) Accepted values:0 to 1800

h = height (in dots) Accepted values:8 to 1800

g = space of character (in dots) Accepted values:8 to 1800

r = orientation/contrast

Add 'I' to field orientation for the field to print inverse(white on black)

0 = normal

1 = rotated 90 degrees

2 = rotated 180 degrees

3 = rotated 270 degrees

r1 = reserve function for future use Default value is 0

r2 = Use Windows-like font spacing (0=no 1=yes)

data = A string up to 239 characters long, that can be a Constant, Date/Time information, a serial variable, or variable data

Command Format / Usage:

ATA,10,10,20,20,0,0,0,I,TEST <CR> Prints the word TEST with a font that has been downloaded to the printer named A, a horizontal coordinate of 10, a vertical coordinate of 10, a width of 20 dots and height of 20 dots, character space of 0, normal rotation using Windows-like font spacing.

AT,x,y,w,h,g,r,r1,r2,data – TrueType Font (internal) (H-400/H-600 Series ONLY)

The AT,x,y,w,h,g,r[I],r1,r2,data command is used to print the internal TrueType font.

Parameters: x = Top Left Horizontal position of text (in dots)

y = Top Left Vertical position of text (in dots)

w = width (in dots) Accepted values:8 to 1800

h = height (in dots) Accepted values:8 to 1800

g = space of character (in dots) Accepted values:0 to 1800

r = orientation/contrast

Add 'I' to field orientation for the field to print inverse(white on black)

0 = normal

1 = rotated 90 degrees

2 = rotated 180 degrees

3 = rotated 270 degrees

r1 = reserve function for future use Default value is 0

r2 = Use Windows-like font spacing (0=no 1=yes)

data = A string up to 239 characters long, that can be a Constant, Date/Time information, a serial variable, or variable data

Command Format / Usage:

AT,10,10,20,20,0,0,0,I,TEST <CR> Prints the word TEST with a horizontal coordinate of 10, a vertical coordinate of 10, a width of 20 dots and height of 20 dots, character space of 0, normal rotation. using Windows-like font spacing

Barcodes

Bt,x,y,narrow,wide,height,rotation,readable,[length]<CR>data – Barcode

The Bt,x,y,narrow,wide,height,rotation,readable,[len<CR>] data command is used to print standard barcodes.

Parameters: t = Bar Code Type

x = Bottom Left Horizontal Position

y = Bottom Left Vertical Position

narrow = x dimension; a positive numeric value (in dots) with a maximum of 10

wide = width of barcode

height = height of barcode



Set rotation = 0 for 0, 1 for 90, 2 for 180, or 3 for 270 degrees.

readable = 0 for off, 1 for below left, 2 for above left, 3 for below center, 4 for above center, 5 for below right, 6 for above right.


data = bar code data

Command Format / Usage:

BA,41,41,2,4,102,0,0,1234567890 <CR> Prints a Code 39 Barcode

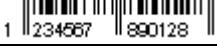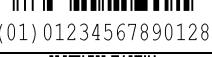t	Code	Sample	t	Code	Sample
A	Code 39	 CODE39	N	I 2 of 5	 4321
A2	Code 39 w/Check Digit		N2	I 2 of 5 with UPC A Check digit	
B	EAN 8	 1234 5670	O	Codabar	 ABCD
C	EAN 8 – Add On 2	 1234 5670	P	Code 93	 CODE93
D	EAN 8 – Add On 5	 1234 5670	Q	Code 128 (Auto)	 CODE128
E	EAN 13	 1 234567 890128	Q2	Code 128 (subset A/B/C)	
F	EAN 13 – Add On 2	 1 234567 890128	Q3	Code 128 (Auto w/ len)	
G	EAN 13 – Add On 5	 1 234567 890128	Q4	Code 128 (subset A/B/C w/ len)	
H	UPC A	 1 23456 78901	R	UCC 128	 (12) 34567890
I	UPC A – Add On 2	 1 23456 78901 2	S	Postnet	
J	UPC A – Add On 5	 1 23456 78901 2	T	DUN 14 ONLY 90	
K	UPC E	 0 23456 7 3	U	EAN 128	 EAN 128
L	UPC E – Add On 2	 0 23456 7 3	V	RPS 128	
M	UPC E – Add On 5	 0 23456 7 3	W	China Post Code	
50	GS1 DataBar Omnidirectional	 (01)01234567890128	51	GS1 DataBar Truncated	 (01)01234567890128
52	GS1 DataBar Stacked	 (01)01234567890128	53	GS1 DataBar Stacked Omnidirectional	 (01)01234567890128
54	GS1 DataBar Limited	 (01)01234567890128	55	GS1 DataBar Expanded	 0123456789012
56	GS1 DataBar Expanded Stacked	 0123456789012			

PDF 417

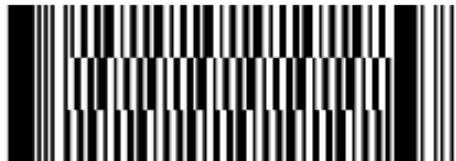

PBx, y, w, h, r, c, ec, len [, rotation] <CR> data

The PBx,y,w,h,r,c,ec,len[,rotation] command is used to print a PDF 417 barcode by specifying the height and width dimensions of the barcode.

Parameters: x = Bottom Left Horizontal Position

$y =$ Bottom Left Vertical Position

w = Width (x dimension) of the narrowest element (bar or space) in the barcode

h = Height (y dimension) of each barcode row in the symbol (Dots)

r = Number of barcode rows, from 3 to 90. Set **r** = 0 for All

c = Number of barcode columns, from 1 to 10. Set c = 0 for All

ec = Error correction level (from 0 to 8)

`len` = Number of encoded data bytes, including carriage returns, and line feed

rotation = 0 for 0 degrees, 1 for 90 degrees, 2 for 180 degrees, 3 for 270 degrees

Command Format / Usage:

PB20,20,2,10,6,10,0,140,0 <CR> 12345678901234567890 Prints PDF417 Barcode

Px, y, w, hm, r, c, ec, len[, rotation] <CR> data

The Px,y,w,hm,r,c,ec,len[,rotation] command is used to print a PDF 417 barcode by specifying the width and height multipliers.

Parameters: x = Bottom Left Horizontal Position

y = Bottom Left Vertical Position

w = Width (x dimension) of the narrowest element (bar or space) in the barcode

hm = Height Multiplier (x dimension * hm = y dimension)

r = Number of barcode rows, from 3 to 90. Set **r** = 0 for All

c = Number of barcode columns, from 1

ec = Error correction level (from 0 to 8)

`len` = Number of encoded data bytes, including carriage returns, and line feed

rotation = 0 for 0 degrees, 1 for 90 degrees, 2 for 180 degrees, 3 for 270 degrees

Command Format / Usage:

P20,20,2,5,6,10,0,140,0 <CR> 12345678901234567890
PCx,y,w,h,r,c,ec,max_len[,rotation] <CR> &*data&*

Prints PDF417 Barcode


The PCx,y,w,h,r,c,ec,max_len[, rotation] command is used to print a PDF417 barcode by specifying the maximum number of characters.

Parameters: Same as the Px command except for:
max_len = Max number of encoded data bytes

Command Format / Usage:

PC20,20,2,10,6,10,0,140,0 <CR> Prints PDF417 barcode

Maxicode

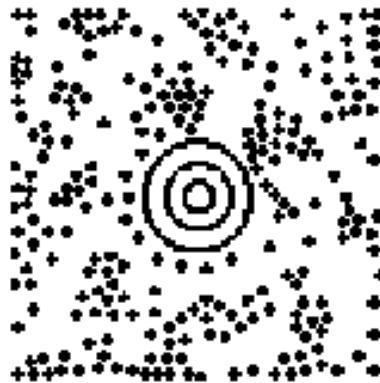

M[B]x, y, sno, nos, mode, ccode, zip, class, rotation[, len] <CR> data


The M[B]x,y,sno,nos,mode,ccode,zip,class,rotation<CR>data command is used to print 2-dimensional maxicode barcodes on the label.

Parameters: B: Use with the len variable when data contains control characters
x = Bottom Left Horizontal position of barcode
y = Bottom Left Vertical position of barcode
sno = Symbol Number, in set of symbols (from 1 to 8)
nos = Number of symbols in set of symbols. (from 1 to 8 sets)
mode = Mode of Maxicode (2, 3, 4 or 6)
ccode = 3 digit country code
zip = 9 digit Postal Code (padded zeros for 5 digit zip codes)
class = service class, (3 digits numeric)
rotation = 0 for 0 degrees, 1 for 90 degrees, 2 for 180 degrees, 3 for 270 degrees
data = Alpha Numeric data up to 84 characters

Command Format / Usage:

MB305,142,1,1,4,000,442129815,333,0 <CR> 1234567890 Prints Maxicode Barcode

Datamatrix

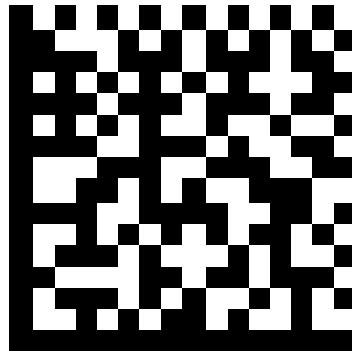

X[R][B]x,y,narrow,rotateR,len <CR> data

The X[R][B]x,y,narrow,rotateR,len command is used to print 2-dimensional Datamatrix barcodes on the label. *Note: R after rotate will create a rectangular Datamatrix*

Parameters: R = Used only if rotation is needed

B = Used with R, only if the data contains control characters

x = Bottom Left Horizontal Position of the Barcode

y = Bottom Left Vertical Position of the Barcode

narrow = Barcode Multiplier (numeric value from 1 to 8)

rotate = 0 for 0 degrees, 1 for 90 degrees, 2 for 180 degrees, 3 for 270 degrees. If an R is used after the degree number, a rectangular Datamatrix will be created.

len = Length of the data

data = Barcode data (maximum of 500 characters)

Command Format / Usage:

XRB142,102,8,0,9 <CR> 123465790 Prints a Datamatrix Barcode

GS1 Databar

Bt,x,y,narrow,wide,height,rotation,readable,[length] data<CR>

The Bt,x,y,narrow,wide,height,rotation,readable,[len<CR>] data command is used to print GS1 Databar barcodes.

Parameters: t = Bar Code Type
t=50 = GS1 Databar Omnidirectional
t=51 = GS1 Databar Truncated
t=52 = GS1 Databar Stacked
t=53 = GS1 Databar Stacked Omnidirectional
t=54 = GS1 Databar Limited
t=55 = GS1 Databar Expanded
t=56 = GS1 Databar Expanded Stacked
x = Bottom Left Horizontal Position
y = Bottom Left Vertical Position
narrow = x dimension; a positive numeric value (in dots) with a maximum of 10
wide = width of barcode
height = height of barcode
Set rotation = 0 for 0, 1 for 90, 2 for 180, or 3 for 270 degrees.
readable = 0 for off, 1 for below left, 2 for above left, 3 for below center, 4 for above center, 5 for below right, 6 for above right.
data = bar code data

Command Format / Usage:

B50,41,41,2,4,102,0,0,1234567890 <CR> Creates a GS1 Databar Omnidirectional Barcode

C#x,y,±value,z – Counter Link Serial File

The C#x,y,±value,z command is used to increment the value stored in a serial file and print it on the label.

Parameters:

- x = Index number
- y = Name of the serial file
- value = number to increment/decrement by
- Set z = B for a numeric value from 0 to 9 for Decimal, or
- Set z = A for hexadecimal, or
- Set z = C for Full Alpha Numeric (0~9 & A~Z)

Command Format / Usage:

C#0,new,+1,B <CR> Increments the “new” serial file by 1 in decimal

Example:

~L,SERIAL,new,1234567895	<i>creates new serial file called new and stores 1234567895</i>
^L60,0,0 ^P5 ^Q C#0,new,+1,B AG,50,137,1,1,0,0,^C0 @	<i>Defines label size. Sets number of copies to 5. Starts label formatting. Increments ^C0 (“new”) by +1 in decimal Prints the incremented number in font: “G” Starts printing.</i>
PRINT RESULT	
1234567895 1234567896 1234567897 1234567898 1234567899	

NOTE: Turning the printer off, or starting a new batch will NOT restart the counter. It will continue to increment where it left off.

Cx,ys,±value,prompt – Serial Number Setting

The Cx,ys,±value,prompt command is used to determine the settings of a serial file.

Parameters: x = a positive numeric value from 0 to 9 to specify a serial file
Set y = none for normal decimal sequence, or
Set y = A for hexadecimal sequence, or
Set y = C for alphanumeric sequence.
s = Start value of the serial variable
±value = incrementation value of serial file
prompt = used to specify a starting value at runtime.

Command Format / Usage:

C0,000,+1,0 <CR> Increments by 1 in decimal, starting with 0.

Daa|bb|dd – Define Date Layout

The Daa|bb|dd command sets the date format that will be printed with ^D command. A maximum of 20 different date formats are supported for a single label.

Parameters: aa = Year: y2 for 2 digit, y4 for 4 digit
bb = Month
me = Month in 3 Character Format
mn = Month in numbers
dd = 2 digit day
jj = 3-digit Julian day of the year
jj2 = 2-digit year followed by the 3-digit Julian day of the year
wy1 = 1 digit week of year
wy2 = 2 digit week of year
w1 = 3 letter abbreviation for day of week
wn = Day of week as number
w2 = Day of week as complete name
m2 = Month of year as complete name
m1 = Month of year as 3 letter abbreviation
| = Separator

Command Format / Usage:

Djj2

AC,58,34,1,1,0,0,Julian Date YYDDD: ^D Returns: Julian Date YYDDD: 04325

Change the date formatting	Result
Dy4-me-dd	2000-MAY-29
Dy4/mn/dd	2000/05/29
Dmn dd y4	05 29 2000
Dy4	2000
Dme	MAY
Ddd	09
Dy4,me	2000-MAY
Dme-dd	MAY-29
dd1	9
mn1	5
w1	MON

Filedb,find,x,y – Find Specific Database Record

The Filedb,find,x,y command is used to find a database record

Parameters: x = fieldname
y = compare data

Command Format / Usage:

<i>V01,10,Input TOSTNUM</i>	
<i>V#LINKDB,TOSTCITY,V00</i>	
<i>Filedb,FIND,TOSTNUM,V01</i>	Finds the value of variable V01 in the Field ‘TOSTNUM’

Filedb,move,x – Moves a pointer to a specific Database Record

The Filedb,move,x command is used to move to a database record.

Parameters: x = number in database
x = FIRST
x = LAST
x = NEXT
x = PRIOR

Command Format / Usage

<i>FILEDB,MOVE,3</i>	Moves to be the third record
<i>FILEDB,MOVE,FIRST</i>	Moves to be the first record
<i>FILEDB,MOVE,NEXT</i>	Moves to be the next record

Filedb,open,x – Opens Database

The Filedb,open,x command opens one database per format

Parameters: x = the name of the database

Command Format / Usage:

Filedb,OPEN,customer

Opens a database named “customer”

Gwxxx...x – Graphic Row

The Gwxxx...x command sends dot rows of graphic data to the printer to compose an image after the ~G command.

Parameters: w = size of image data is bytes. (ASCII code of 1 to 255) (ASCII 2 = 50 Decimal)
Each Gwxx. command prints 1 row of graphic data.

Command Format / Usage:

Example	Description
<pre>^L20,2 ^W50 ^R20 ~G G(AAAAAAAAAAAAAAA A @</pre>	<p>; Left margin = 20 dots ; Place printer into graphic input mode For this example, ASCII “(“ character is 40 decimal (= 40 bytes). Total 14 lines, so the graphics height is 1.75mm (14 dots)</p>
	<p>Result</p> 

NOTE: This and the ~G command create an immediate graphic image. It can NOT be used with any other format command. These are only to be used when creating a Windows driver.

Hx,y,row_count,col_count,row_width,col_width,line_width – Table

The Hx,y,row_count,col_count,row_width,col_width,line_width command is used to draw a table on the label.

Parameters: x = Top Left Horizontal Position (dots)
y = Top Left Vertical Position (dots)
row_count = number of rows
col_count = number of columns

Command Format / Usage:

H10,10,3,3,10,10,2 <CR> Prints a 3x3 table at 10,10 with 10x10 cells and a line thickness of 2

La,x,y,x1,y1 – Draw Line

The La,x,y,x1,y1 command is used to define a line to be printed on the label.

Parameters: Set a = o for Overwrite line, or
Set a = e for Exclusive line
x = Top Left Horizontal Position
y = Top Left Vertical Position
x1 = Bottom Right Horizontal Position
y1 = Bottom Right vertical Position

Command Format / Usage:

Lo,10,10,50,12 <CR> Prints a line 40 dots long and 2 dots wide, starting at 10,10

NOTE: Diagonal lines are not supported


Qx,y,width,height <CR> data<CR> – Pattern Draw

The Qx,y,width,height command is used to specify the size of a graphic, and is followed by the graphic data. Since PCX and BMP are known formats, it is usually better practice to store the graphics in FLASH memory, rather than defining the graphic in the format.

Parameters: x = Bottom Left Horizontal Position (in dots)

y = Bottom Left Vertical Position (in dots)
 width = width of graphic (in bytes)
 height = height of graphic (in dots)

Command Format / Usage:

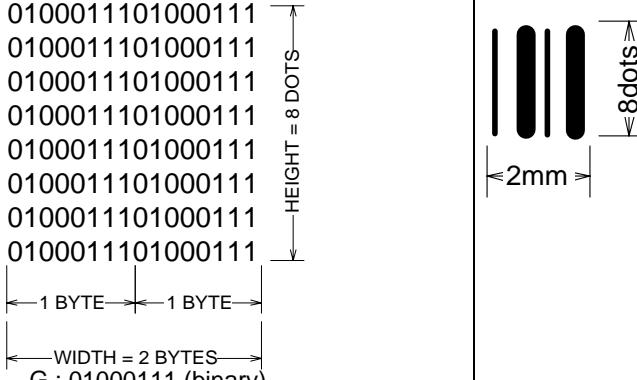Example	Result	
^L,20,0,0 ^W40 ^S6 ^D5 ^Q Q40,10,2,8 GGGGGGGGGGGGGGGG @	<pre> 0100011101000111 0100011101000111 0100011101000111 0100011101000111 0100011101000111 0100011101000111 0100011101000111 0100011101000111 G : 01000111 (binary) </pre> 	

NOTE: Most Windows/DOS editors use a <CR><LF> pair instead of a single <CR>. When this happens, the Q command will see the <LF> as part of the data stream.

Rx,y,x1,y1,lrw,ubw – Draw Rectangle

The Rx,y,x1,y1,lrw,ubw command is used to draw a rectangle on the label.

Parameters:

- x = Top Left Horizontal Position
- y = Top Left Vertical Position
- x1 = Bottom Right Horizontal Position
- y1 = Bottom Right Vertical position
- lrw = Thickness of left and right border (in dots)
- ubw = Thickness of top and bottom border (in dots)

Command Format / Usage:

Example	Description	Result
^H10	; Darkness = 10	
^S6	; Speed = 6 inch/second	
^L50,2	; Label height = 50mm, gap = 2 mm	
^W70	; Label width= 70mm	
^Q	; End of Settings	

R20,20,120,120,8,8	; (x,y) = (20,20), (x1,y1) = (120,120)		
@	lw = 0 dots, bw = 0 dots		

Th|m|s – Time Formatting

The Th|m|s command is used to specify a format for the printer's ^T time command.

Parameters: h = specifies hours (00-23)
m = specifies minutes (00-59)
s = specifies seconds (00-59)
| = separator (can be any character with an ASCII code from 32 to 63)

Command Format / Usage:

Th:m <CR> Sets the time format to the current hour and minute.

V#ADD,name,size,prompt – Descriptive Variables

The V#ADD,name,size,prompt command allows for naming a when-printed field. This is desirable when populating multiple fields from an external file.

Parameters: Set name = the descriptive name for the variable
Set size = the maximum number of characters for the variable field
Set prompt = the desired prompt for user input

Command Format / Usage:

V#ADD,weight,5,Enter Weight<CR> Prompts user with “Enter Weight”, 5 characters maximum, and stores the entered value in a variable called weight

V#ADDCHKSUM,Vnn – MOD 10 Check Digit

The V#ADDCHKSUM,Vnn command is used to add a MOD 10 Check Digit to a variable field.

Parameters: Vnn = Identifier of the variable to be added

Command Format / Usage:

V#ADDCHKSUM,V05 <CR> Adds Checksum to a field named V05

V#DEFAULT,Vnn,default_value – Variable Default Value

The V#DEFAULT,Vnn,default_value command is used to assign a default value to a variable. This is useful for calculations as fixed values because calculation commands require variables rather than fixed values.

Parameter: Vnn = the variable to assign the default value to
Default_value = the value to assign to the variable

Command Format / Usage:

V#DEFAULT,V01,1<CR> Sets V01 to 1 in the event a value is not assigned to it.

V#LINKDB,x,y – Substitutes Variable Database data

The V#LINKDB,x,y command is used

Parameters: x = file name
y = variable

Command Format / Usage:

V#LINKDB,PHONE,V00 Substitutes the data in the PHONE field with data from Variable 00.

V#RENAME,name,x – Renames variables

The V#RENAME,name,x command renames the variable name to the original variable name.

Parameter: name = rename the variable with an 8 character maximum
x = variable number

Command Format / Usage

V#RENAME,weight,V00 Renames variable V00 to weight.

V#SET,FLOATFORMAT,n,round_type,Vnn – Decimal Calculation

The V#SET,FLOATFORMAT,n,round_type,Vnn command is used to allow calculations on numbers containing decimal places.

Parameter: n = number of decimal places to print
Round_type = O for round off, U for round up, D for round down
Vnn = variable item (V00 – V60)

Command Format / Usage:

V#SET,FLOATFORMAT,0,U,V06<CR> Displays the contents of V06 rounded up with 2 decimal places

V#SET,THOUFORMAT,Vnntd[o] – Numeric Separation

The V#SET,THOUFORMAT,Vnntd command is used to display numbers using different characters for decimals and separators. This is useful for displaying numbers in European format.

Parameter: Vnn = Variable item (V00-V60)
T = Thousands separator (0=disable)
D = Decimal character
O = Optional character to add to the end of the string

Command Format / Usage:

V#SET,THOUFORMAT,V05.,<CR> Displays the contents of the variable V05 in the format: 999.999,99

V#STRCPY,Vxx,Vyy – Copy Variables

The V#STRCPY,Vxx,Vyy command is used to copy the contents of one variable into another variable.

Parameter: Vxx = name of first variable
Vyy = name of second variable

Command Format / Usage:

V#STRCPY,V01,V02 <CR> Copies the contents of V02 to V01

V#STRSET,Vnn,Vnn – Combines Multiple Variables

The V#STRSET,Vnn,Vnn command is used to combine the contents of multiple fields into a separate field.

Parameter: Vnn = number for first variable
Vnn = number for second variable

Command Format / Usage:

V#STRSET,V01,ABC^C0^V00 <CR> Combines the contents of a variable field named V01, a literal value, a counter, and a second variable field named V00 into a separate field.

V#STRSUB,Vxx,Vyy,first,length – Copy Substring

The V#STRSUB,Vxx,Vyy,first,length command is used to copy a substring of one variable into another variable

Parameters: Vyy = The name of the variable to get the substring from
Vxx = The name of the variable to copy the substring to
first = first position
length = number of characters to copy

Command Format / Usage:

V#STRSUB,V01,V02,1,2 <CR> Copies the first 2 characters of V02 to V01

V#SET,UNPROMPT,x – Disable Prompt for a Variable Field

The V#SET,UNPROMPT,x command will not prompt the user to enter variable data at print time.

Parameters: variable number

Command Format / Usage:

V#SET,UNPROMPT,V00 Variable V00 will not have a prompt at print time

Vt,x,y,x_mul,y_mul,gap,rotation,data – Text (Downloaded Fonts)

The Vt,x,y,x_mul,y_mul,gap,rotation,inverse,data command is used to Print a text field using a bitmapped font that has been downloaded to the printer.

Parameters: t = an alpha character from A to Z specify the font.
x = Top Left Horizontal position of text (in dots)
y = Top Left Vertical position of text (in dots)
x_mul = Horizontally magnified up to 8 times as large
y_mul = Vertically magnified up to 8 times as large
gap = Distance to add between characters (in dots)
rotation - Add 'I' to field orientation for the field to print inverse(white on black)

0 = normal
1 = rotated 90 degrees
2 = rotated 180 degrees
3 = rotated 270 degrees
data = A string up to 239 characters long, that can be a Constant, Date/Time information, a serial variable, or variable data

Command Format / Usage:

VK,10,10,3,3,10,0,TEST <CR> Prints the word TEST in a downloaded font “K” at 10,10

Vxx,length,prompt[, jnl] – Define Variable Field

The Vxx,length,prompt command is used to specify variable data fields.

Parameters: xx = a positive numeric value to identify a field. (up to 30 variable fields when downloading to the printer memory)

length = number of characters (up to 98)

prompt = prompt for variable value (maximum 20 character). This will be displayed on the LCD in stand-alone mode.

j = designates the beginning of justification specifications

Set n = l for Left

Set n = c for Center

Set n = r for Right

l = the length of the entire string in millimeters.

Command Format / Usage:

V01,10,VNAME1,jr20 <CR> Sets a variable field named 01, right justified, 20mm wide, and give the prompt: VNAME1

NOTE: There is a maximum number of 60 variables. Maximum 30 variables when downloading to the printer memory

V#OP+,V00,V01,V02 – Addition

The V#OP+,V00,V01,V02 command is used to add the contents of V01 and V02 and store the result in V00.

Parameters: V00 = variable to store the result of the addition.

V01 & V02 = variables to add together

Command Format / Usage:

V#OP+, V00, 10, V02 <CR> Adds 10 to the contents of V02 and stores the result in V00
V00 = V01 + V02

V#OP-,V00,V01,V02 – Subtraction

The V#OP-,V00,V01,V02 command is used to subtract the contents of V02 from V01 and store the result in V00.

Parameters: V00 = variable to store the result of the subtraction.
V01 & V02 = variables to subtract

Command Format / Usage:

V#OP-, V00, 10, V02 <CR> Subtracts 10 from the contents of V02 and stores the result in V00
 $V00 = V02 - 10$

V#OP*,V00,V01,V02 – Multiplication

The VOP*,V00,V01,V02 command is used to multiply the contents of V01 and V02 and store the result in V00,

Parameters: V00 = variable to store the result of the division
V01 & V02 = variables to multiply together

Command Format / Usage:

VOP*,V00,V01,V02 <CR> Multiplies V01 and V02, and stores the result in V00
 $V00 = V01 * V02$

V#OP/,V00,V01,V02 – Division

The V#OP/,V00,V01,V02 command is used to divide the contents of V01 by V02 and store the result in V00.

Parameters: V00 = variable to store the result of the division
V01 & V02 = variables to divide

Command Format / Usage:

V#OP,V00,V01,10 <CR> Divides the contents of V01 by 10 and stores the result in V00
V00 = V01 / V02

V#OP%,V00,V01,V02 – Remainder

The V#OP%,V00,V01,V02 command is used to divide V01 by V02, and store the remainder in V00.

Parameters: V00 = variable to store the remainder in
V01 & V02 = variables to divide

Command Format / Usage:

V#OP%,V00,V01,2 <CR>

Divides the contents of V01 by 2 and stores the remainder in V00. This is used to determine if a variable is an odd or even number. If V00 = 0, the number is even. If V00 = 1, the number is odd.
 $V00 = V01 \% V02$

Wx,y,mode,type,ec,mask,mul,len,rotate – QR Code

The Wx,y,mode,type,ec,mask,mul,len,rotate command is used to create the QR Code symbology.

Parameters: x = horizontal position of left bottom of barcode in dots.
y = vertical position of left bottom of barcode in dots.
mode = Data mode character set.
 1 = numeric data mode
 2 = Alpha numeric data mode
 3 = 8-bit data mode
 4 = Kanji data mode
 5 = Mixing data mode (any of the modes 1 through 4).
type (model) = 1 (original)
 2 (enhanced)
ec = error correction.
 L = Low
 M = Medium
 Q = Medium high
 H = High
mask = 0 through 7 (8 = auto)
mul = cell multiplier, 1 through 8.
len = data length
rotate = 1 = 90 degrees
 2 = 180 degrees
 3 = 270 degrees

Command Format / Usage:


W10,10,2,1,L,8,5,36,0<CR> 0123456789ABCDEFGHIJKLMNPQRSTUVWXYZ

The above commands print a QR Code

Yx,y,name – Recall Graphic

The Yx,y,name command is used to position a graphic, stored in FLASH memory, on a label.

Parameters: x = Top Left Horizontal Position
y = Top Left Vertical Position
name = name of downloaded graphic

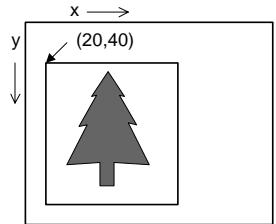

Command Format / Usage:

Y20,40,GRAPHIC1 <CR> Prints a graphic on the label format at 20,40

@ - Print Label

The @ command is used to terminate the label formatting mode and start printing the label.

Parameters: *None*

Command Format / Usage:

@ <CR> Ends label formatting and starts printing

Appendix A - Examples

Constructing a format using TPL commands

To create a format using Tharo Programming language, a specific sequence of command combinations must be followed.

Control and Setup Commands	Defines label specifications and setup options
<code>^Q</code>	Specifies the start of Label Formatting Commands
Label Format Commands	Defines the label format
<code>@</code>	Terminates and Prints the Label.

NOTE: Control and Setup Commands will not work if placed in the Label Format Commands.

Example

Text Internal font C, and Downloaded font K

Example	Result	Rotate printing	Result
<code>^L50,0,2 ^W50 ^S6 ^H10 ^R10 ^C1 ^Q VK,10,10,1,1,1,0,PRINTER Dmn/dd/y2 AC,10,50,1,1,1,0,<code>^D</code> Th :m</code>	<code>PRINTER AUG/27/00 08:39</code>	<code>^L50,0,0 ^W50 ^S6 ^H10 ^Q AC,100,30,1,1,1,0,ROTATION 0 AC,40,20,1,1,1,1,ROTATION 90 AC,260,150,1,1,1,2,ROTATION 180 AC,290,200,1,1,1,3,ROTATION 270 @</code>	<code>ROTATION 0 ROTATION 90 ROTATION 180 ROTATION 270</code>
<code>AC,10,100,1,1,1,0,<code>^T</code></code>			
<code>@ Adjusting the character spacing ^L30,0,0 ^W50 ^S6 ^H10 ^Q AC,10,10,1,1,10,0,PRINTER AC,10,100,1,1,1,0,PRINTER @</code>	<code>PRINT E R PRINTER</code>		

Appendix B – Barcode Details

Code 128 Subsets

BQ2,X,Y,NARROW,WIDE,HEIGHT,ROTATION,READABLE,[LENGTH]<CR>DATA

Code 128 Subset A: Includes the standard uppercase alphanumeric keyboard characters, control and special characters.

Code 128 Subset B: Includes the standard uppercase and lowercase alphanumeric keyboard characters and special characters.

Code 128 Subset C: Used for double density encoding of numeric data (the set of 100 digit pairs from 00 through 99).

Example	
Subset A: BQ2,8,8,2,5,40,0,0,AAPPLE	To select Code 128 Subset A, place an ASCII A before the data to be encoded
Subset B: BQ2,8,8,2,5,40,0,0,BAPPLE	To select Code 128 Subset B, place an ASCII B before the data to be encoded
Subset C: BQ2,8,8,2,5,40,0,0,C&G1234	To select Code 128 Subset C and encode a FNC1, place an ASCII C and a &G before the data to be encoded.
Special characters handling: BQ4,8,8,2,5,40,0,0,19 C&G0100012345678905	To encode FNC1 into a Code 128 Subset C, send the ASCII &G. <i>Note: Because <CR> is a valid character in Code 128, it is recommended that the [length] command be used. The “19” in this example illustrates that there are 19 characters to be encoded.</i>

ASCII	2 Character	Code A	Code B	Code C
96	&A	FNC3	FNC3	-NA-
97	&B	FNC2	FNC2	-NA-
98	&C	SHIFT	SHIFT	-NA-
99	&D	Code C	Code C	-NA-
100	&E	Code B	Code B	Code B
101	&F	FNC4	FNC4	Code A
102	&G	FNC1	FNC1	FNC1

Tharo Systems, Inc.
2866 Nationwide Parkway
PO Box 798
Brunswick, Ohio 44212-0798

Phone: (330) 273-4408
Fax: (330) 225-0099
Email: tharo@tharo.com
<http://www.tharo.com>